




LOCK UP CLUTCH INSTALLATION

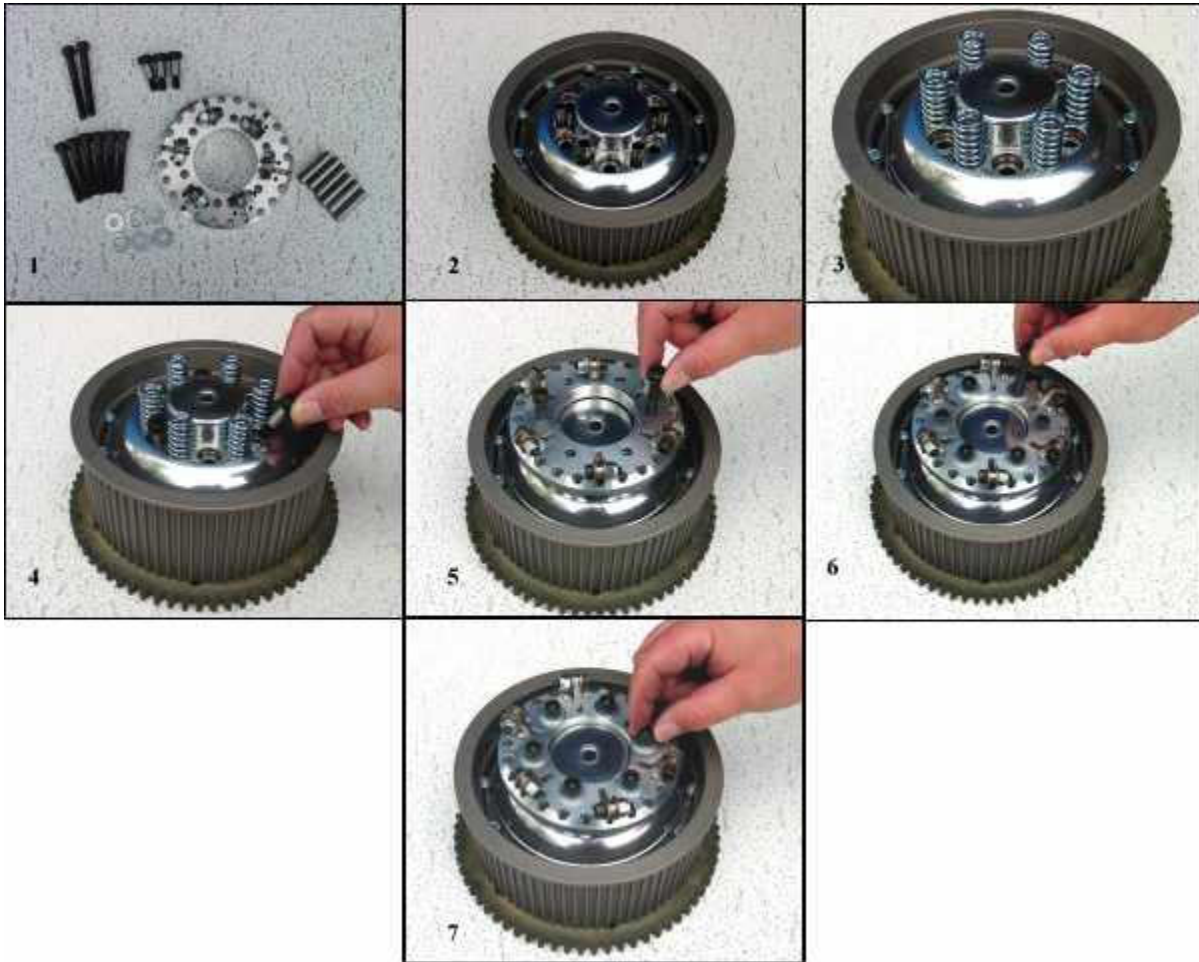

1. Install the 6 bushings into 6 alternate holes in pressure plate.
2. Install the 6 springs over the bushings.
3. Install the 3 short shoulder bolts into 3 alternate holes in pressure plate.
4. Place lock up clutch onto the springs.
5. Install the 2 long bolts across from each other and tighten them down to compress the lock up clutch in place.
6. Install 4 of the shorter bolts with washers in alternate holes and tighten them down.
7. Remove the 2 long bolts and replace them with the other 2 shorter bolts and washers.