



BIG FIX INSTALLATION INSTRUCTIONS




1. Remove stock cage and stock bearings. With grease, coat bearing surfaces of clutch hub and clutch basket.

Place basket over hub and place 3 bearings

at the 6 o'clock position, place 1 bearing each at 3, 9 & 12 o'clock position, this will center the clutch basket.

Insert the balance of the bearings from 6 o'clock clockwise and counter clockwise up to 12 o'clock.

There should be a slight space between the bearings when installed; this is normal.

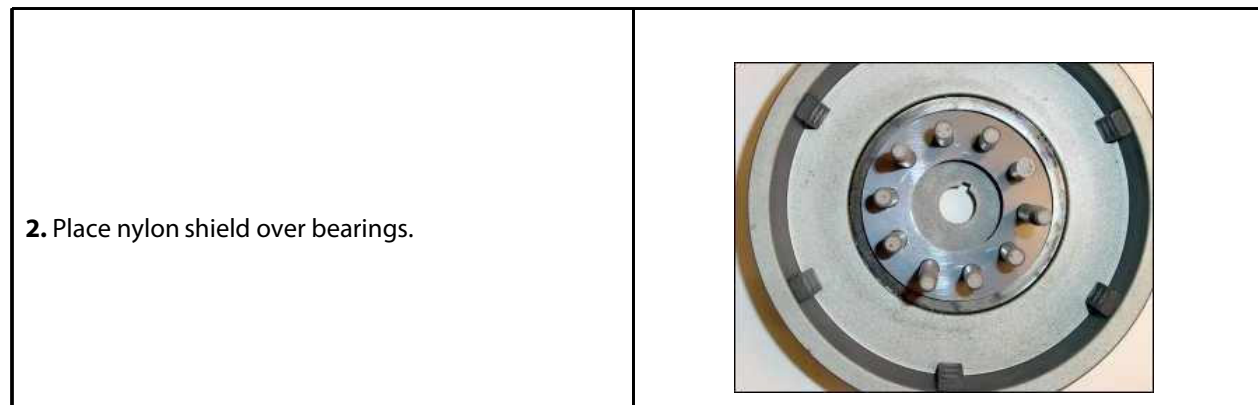

3. Place the stock cage retainer (with lip facing out) over nylon shield



4. Install the 3 springs over studs



Pictured right is how cage retainer is installed with lip facing out

